

TECHNICAL SERVICES ADVISORY MEMO


To: HFD Customers From: Technical Service Date: September 9, 2013

Subject: HFD controller ambient display On/Off

The HFD controller's ambient temperature display may be accidentally turned off. If the display no longer shows the ambient temperature, it may be turned on by:

1. Turning on the controller

2. Pressing and holding the TIME button, then pressing and releasing the On/Off button

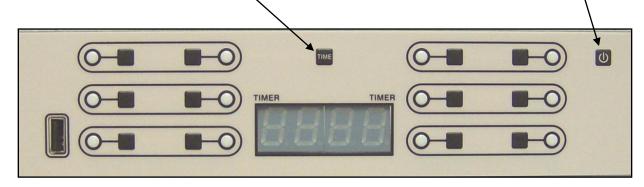

When the temperature display is on, holding the TIME button and pressing the On/Off button will turn the display off.

Controllers returned to SVA because the ambient temperature is not being displayed will not receive credit.

If you need further information or assistance please call Technical Service at: 800-344-7216 extension 9935