

Diagnostics Error Codes

Error Codes (sub-codes indented)	Description	Clearing Error codes: VEC 12.3 - Press row 2 selection buttons for 2 sec. VEC 12.4 - Press selection #4 for 2 sec. Or automatically by the following activities.
None	No error exist	
Vend Mechanism Error	Vend mechanism summary error	
Vend Sensor 1	Vend Sensor Error	Check or replace vend sensor assembly
Vend Sensor 1	Vend Sensor Error	Check or replace vend sensor assembly
Column Jam XX	Column jam in column XX	Complete a test vend cycle for column XX
System Error	Control system summary error	
Door Switch	Door switch open for more than 1 hour	Door switch closure detected
RAM	RAM check sum of service mode settings	Change any service mode setting
A/C Low	A/C supply low	
Escrow Return Mech.	Escrow return mech. error	Check or replace escrow return mech assembly
Scaling Factor	Scale factor incompatibility	Scale factor corrected
Inlet Sensor	Vendor inlet coin chute sensor is blocked	Blockage removed
Inlet Blocked	Vendor inlet coin chute is blocked	Coin detected by changer
Select Switch Error	Selection switch summary error	
Selection XX	Selection switch error in switch XX	Selection switch opens
Space to Sales	Space to sales summary error	
Unassigned Column XX	Unassigned column for column XX	Column is assigned
Changer Error	Changer summary error	
No Communication	No changer communication	Proper communication received
Tube Sensor	Tube sense error	Changer corrected
Coin Inlet	Changer inlet chute blocked	A coin is sensed
Tube XX Jammed	Tube payout jam in coin type XX	Changer corrected
Checksum	Changer ROM check sum error	Changer corrected
Excessive Escrows	Excessive escrow attempts	A valid coin is sensed
Coin Jam	Coin jam	A coin is sensed
Low Acceptance	Acceptance rate below 80%	Acceptance rate above 80%
Disconnected	Disconnected acceptor	Acceptor properly connected
Coin Routing	Coin routing error	Coin is routed properly
Bill Validator Error	Bill validator summary error	
No Communication	No bill validator communication	Proper communication received
Stacker Full	Bill validator stacker full	Receive stacker command
Motor Error	Defective bill validator motor	Validator becomes enabled
Jammed	Bill validator jammed	Validator becomes enabled
Checksum	Bill validator ROM check sum error	Validator becomes enabled
Stacker Open	Bill validator stacker is open or out of position	Validator becomes enabled
Sensor	Bill validator sensor error	Validator becomes enabled
Card Reader Error	Card reader summary error	
No Communication	No card reader communication	Proper communication received
Code XY	Card reader non-transient error; code X, subcode Y	Error stops being reported
Refrigeration Error	Refrigeration summary error	
Sensor	Temperature sensor defective or unplugged	Sensor detected
Too Cold	Cabinet temperature 3°F below low limit	Temperature rises above low limit
Too Hot	Cabinet temperature 3°F above high limit	Temperature falls below high limit
Not Cooling	Cooling system not cooling	System cools 1°F per hour
Not Heating	Heating system not heating	System heats 1°F per hour