

SandenVendo

Product Setup Instructions

The Next Dimension in Technical Service Information

Kit Number: 1234692 KIT SLIM CAN 355ML, 621, 721
1234692-1 KIT, SLIM CAN 355ML, 821

Date: 11/21/2013

Setup Instructions: 1231456

Rev B

Subject: Vending 355ml Slim Can

ECN: 54945

Vendors: All V21 Vendors

Rev Date: 03/06/14

Purpose: To vend 355ml Slim Can in a V21 machine. (One column only)

<i>Quantity</i>		<i><u>Parts List</u></i>	<i>Description</i>
		<i>Part Number</i>	
621-721:	2	1114348-2	Spacer, Mag Foam, .5", 38"
821:	2	1114348-4	Spacer, Mag Foam, .5", 45.3"
	1	1194653	Prod Spacer, Lwr, V21
	1	1231456	Product Set-up Inst, 355ml can

Installation

- Step #1** Locate backspacer in forward most position. Refer to "Product Setup Guide" decal located on back of inner door for correct placement.
- Step #2** Install product spacer (p/n 1194653) on right side of column by inserting the tabs in the cutouts. See Figure #1.
- Step #3** Install magnet spacers (p/n 1114348-2 for 621/721 machine) on left side of column with the front spacer approximately 1/2" from the front of the stack and the back spacer shall flush with the front spacer. See Figure #1.
- Step #4** Place lower partition clip in forward position. Refer to "Product Setup Guide" decal located on back of inner door for correct placement.
- Step #5** Replug power supply and test vend column.

Machine Set-Up: 355ml can

Product Dimensions: Top: 57.4mm; Bottom: 57.4mm; Length: 155.44mm

A) Product Depth: 2

B) Back Spacer: 1 (forward most position).

C) Product Step Location: Forward

D) Side Shim/ Spacer: 1194653

E) Sold Out Flap: N/A

F) Sold Out Spacer: N/A

G) Column Quantity: 40; Column: 10 ; Vend Out: 40

H) Bucket clip: N/A

I) Magnetic column spacer: P/N: 1114348-2 for 621&721, 1114348-4 for 821. Use 2ea per column installed side by side on the right side of the column from the back spacer to 1/2" front of the column.

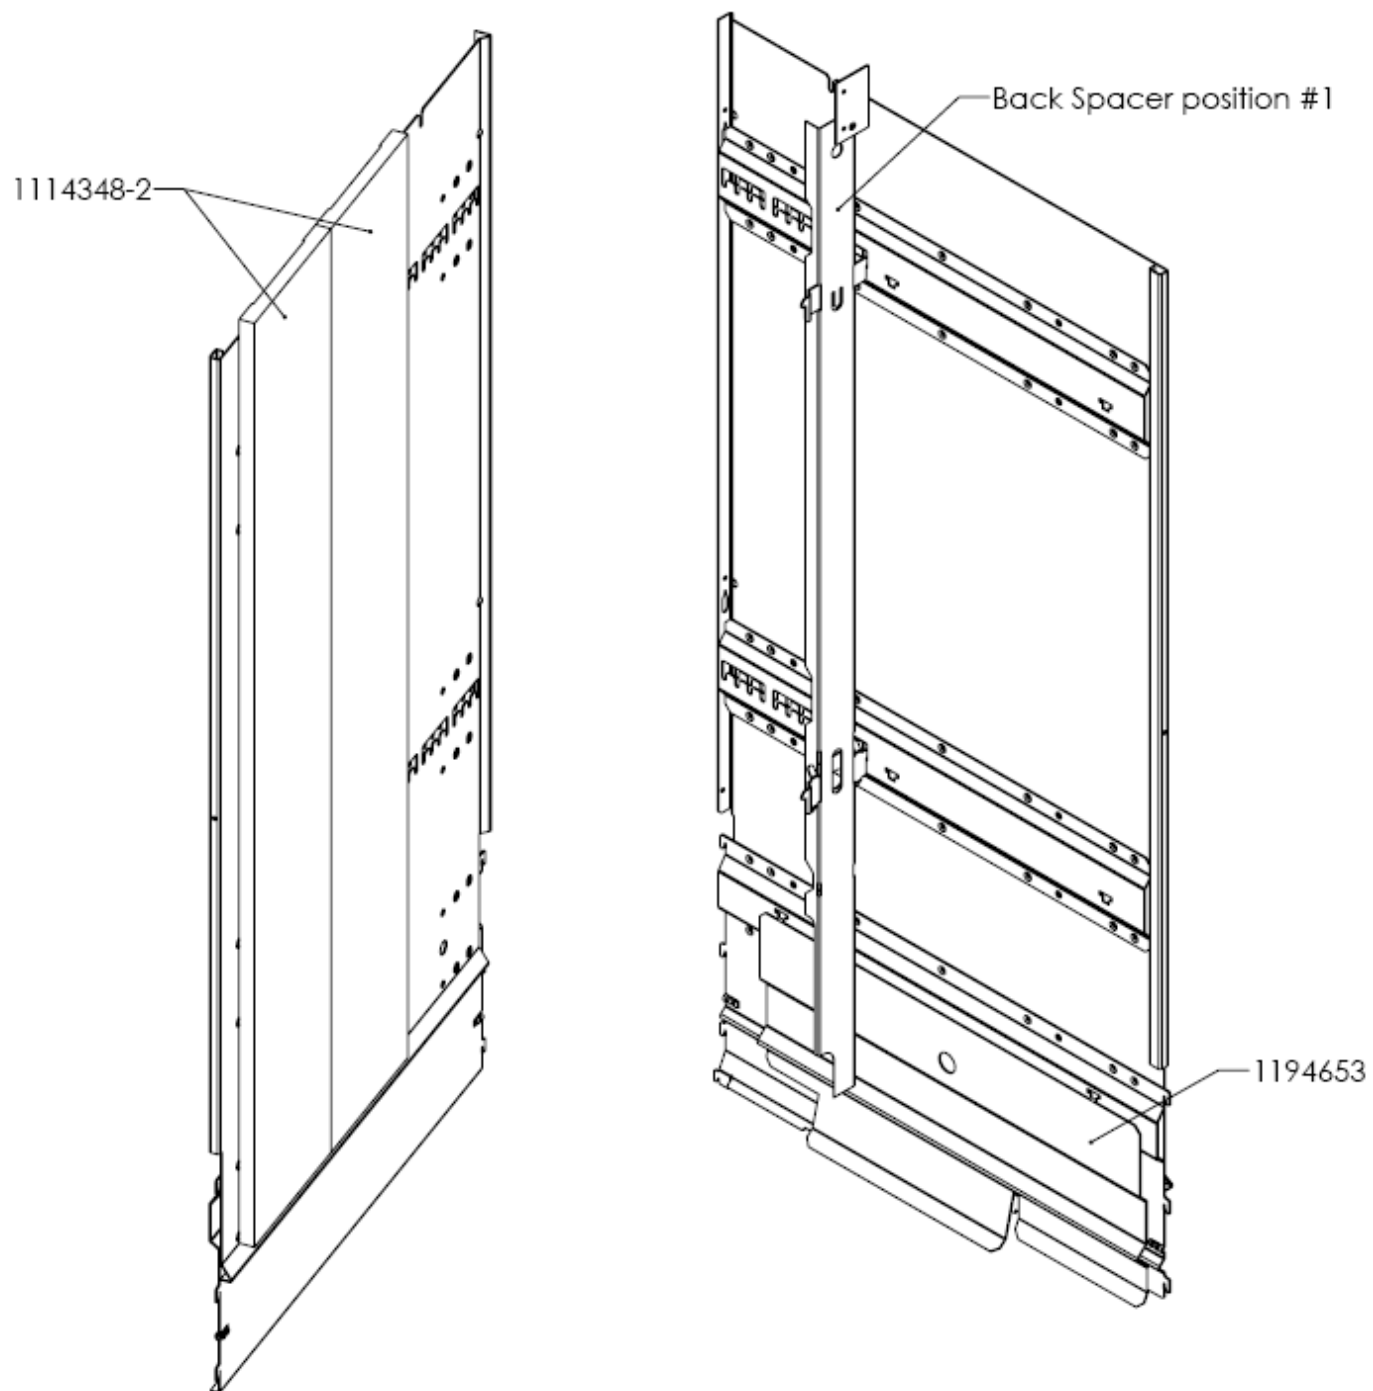


Figure 1